

OPERATION

Refer to Schematic Diagram, Figure 4.

When the switch knob is rotated to either the **C** or the **G** positions, all output connectors are grounded except the C connector. **WARNING: DO NOT OPERATE THE TRANSMITTER INTO THE COAXIAL SWITCH WHEN THE POINTER IS AT THE **C** OR THE **G** POSITION.** When the Switch is in either of these positions, the transmitter is connected to an open circuit.

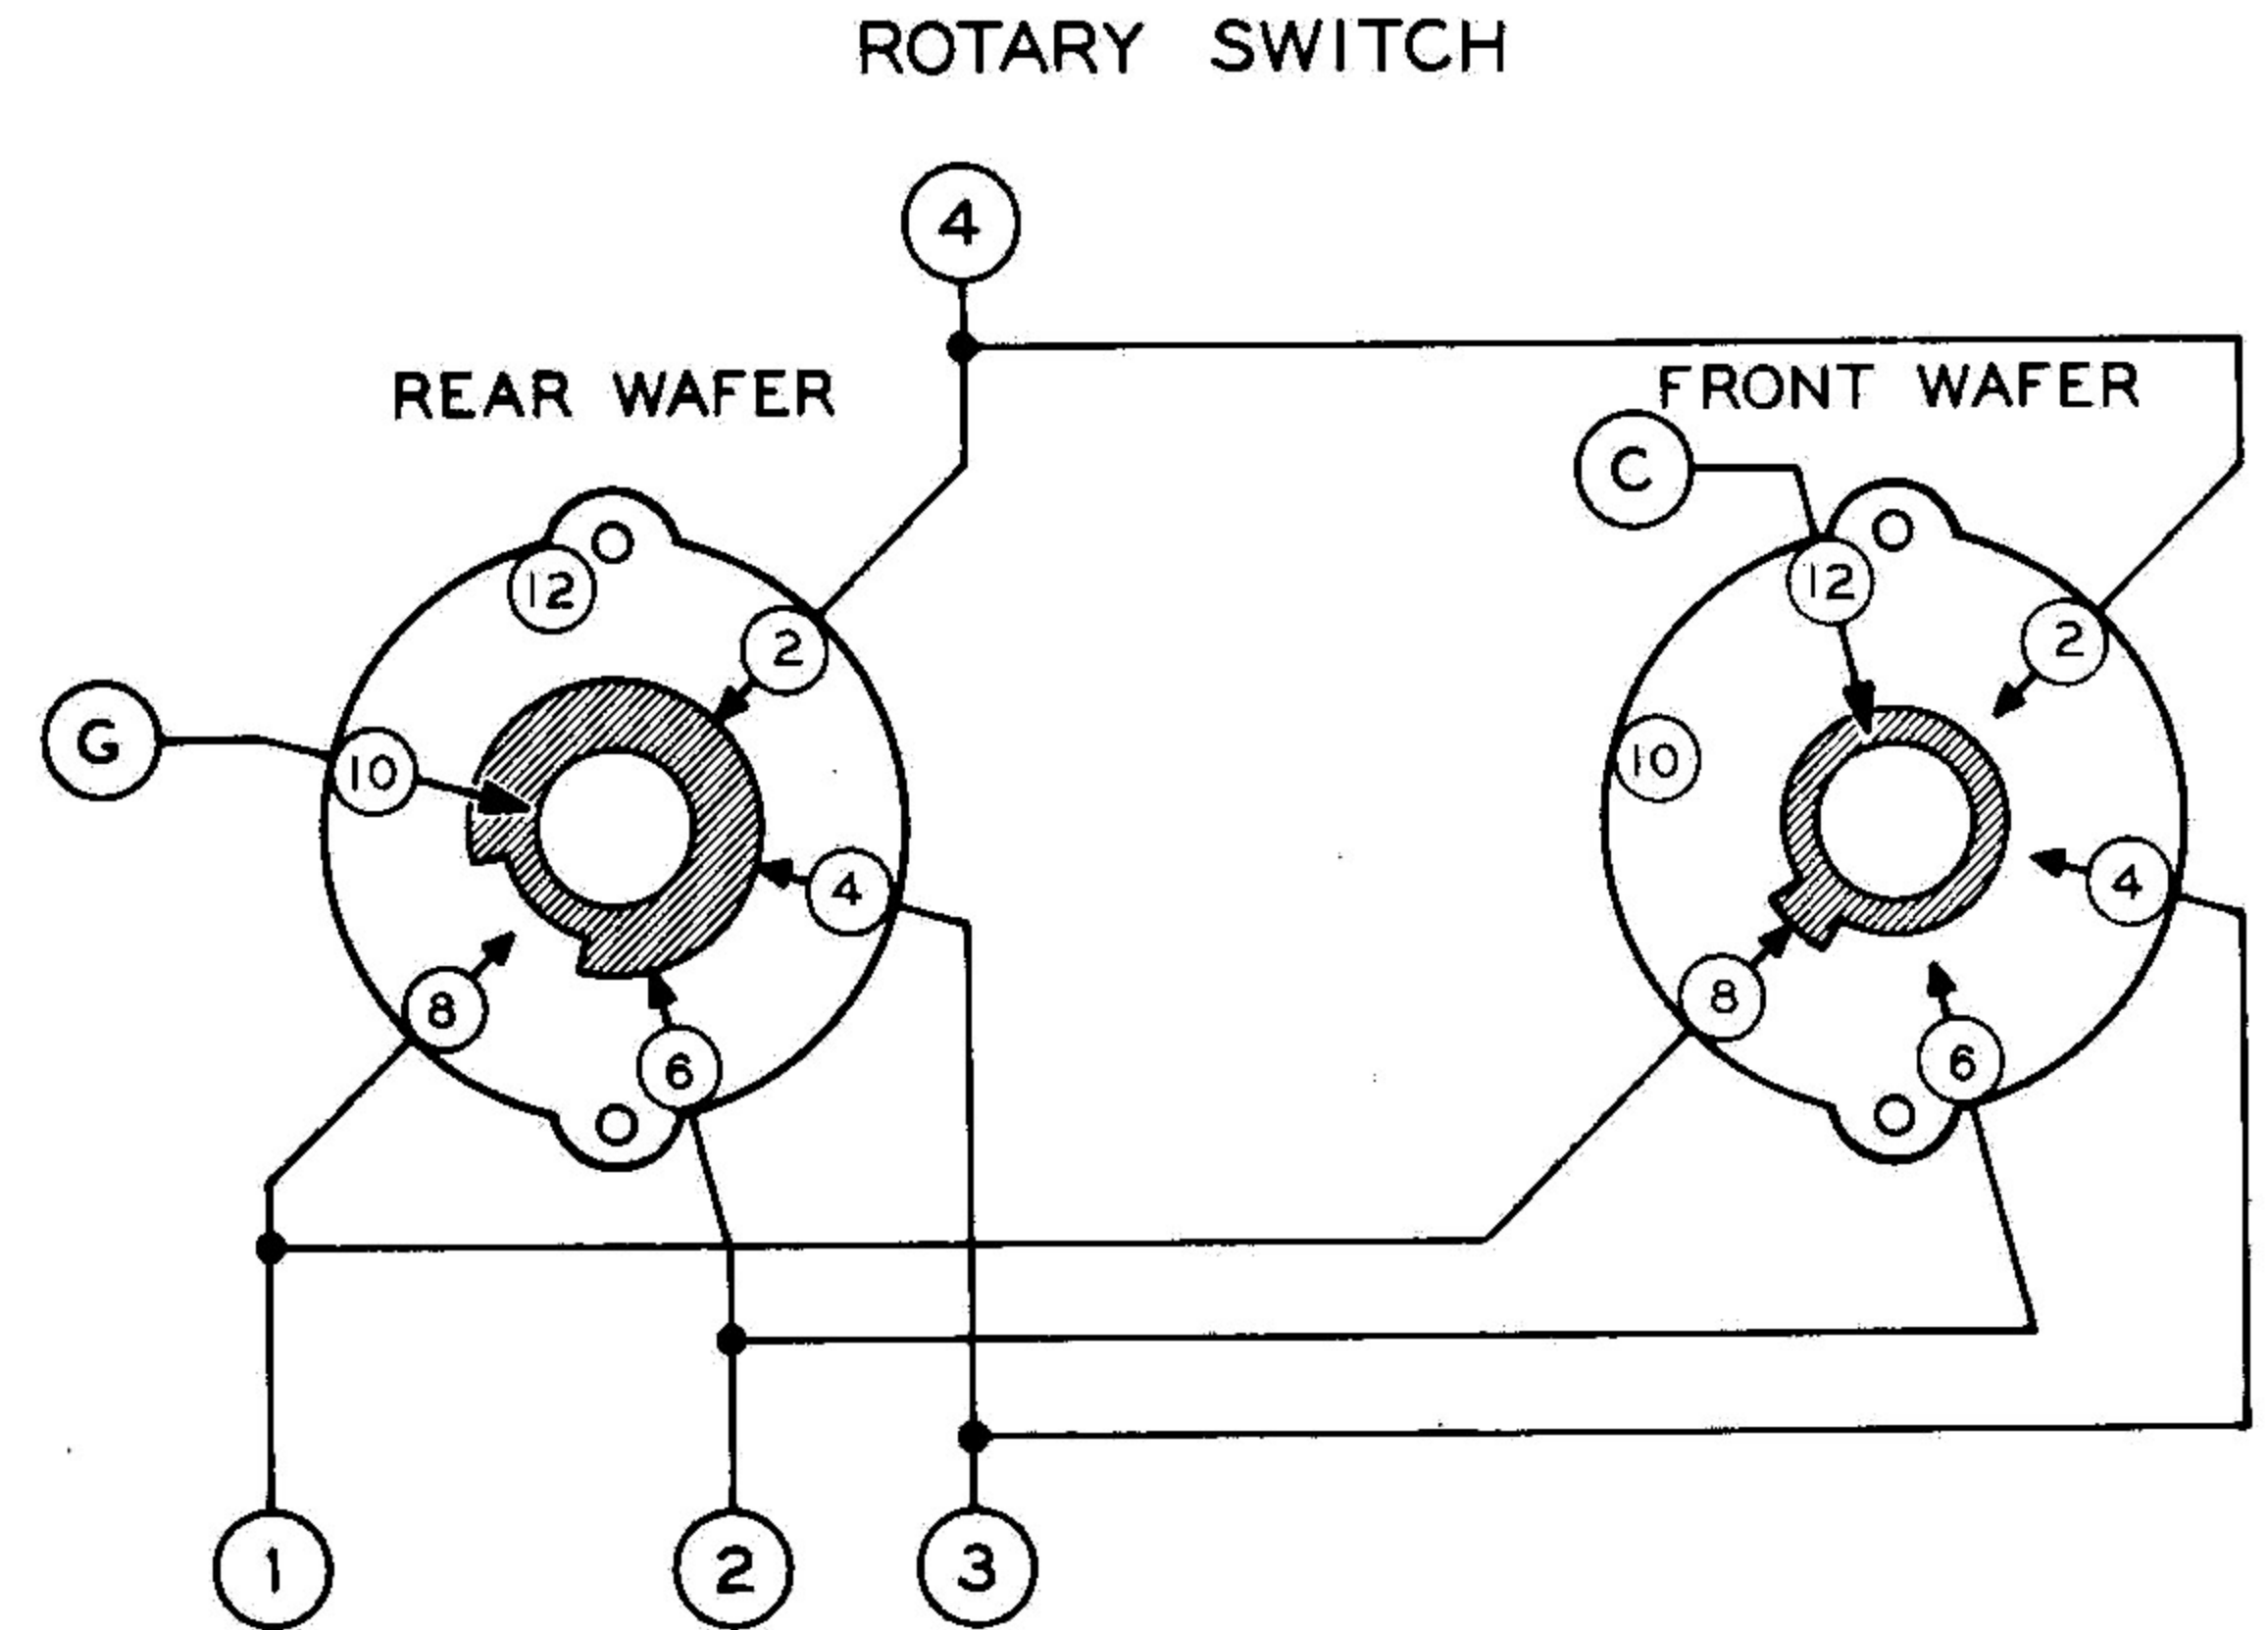


Figure 4